

Reservdelstlista för EPSON-dator HX 20

Art nr	Benämning	Ingår i	Pos nr
66 77020-45	Teknisk manual Hx20	Hx20	-
69 00125-01	AC Adapter	Hx20	
X300124200	Transistor	Hx20	Q11
X302307200	Transistor	Hx20	Q12
X400014680	LSI	Hx20	66
X400104492	RAM M16010C	Hx20	126
X440034970	Regulator TL497	Hx20	3A
X460401000	Transistor brygga	Hx20	13D
X504000600	Kristall	Hx20	CR2
X504001700	Kristall	Hx20	CR1
X600560300	Kontakt	Hx20	CN3
X600570500	Kontakt	Hx20	CN1
X600570800	Kontakt	Hx20	CN2
X600594000	Kontakt	Hx20	CN7
X620100270	Reset switch	Hx20	SW1
X620100280	Kontakt	Hx20	SW2
X620100400	Kontakt	Hx20	SW4
X620100410	Kontakt	Hx20	SW3
Y201000001	Hölje övre	Hx20	-
Y201001001	Hölje undre	Hx20	-
Y201017001	Hölje dummykass. övre	Hx20	-
Y201017101	Hölje dummykass. undre	Hx20	-
Y201202000	Huvud kretskort	Hx20	-
Y201301000	Kabel set 701	Hx20	CN8
Y201501005	Fjäder B	Hx20	-
Y201501007	Fjäder A	Hx20	-
Y201501028	Keytopssats Danmark	Hx20	-
Y201501029	Keytopssats Sverige	Hx20	-
Y201502000	LCD Display	Hx20	-
Y201509000	Tangetbord Svenskt	Hx20	-
Y201590000	Printermekanism	Hx20	-
Y201800301	Huvud CPU	Hx20	8G
Y201800501	Mask ROM	Hx20	15E
Y201800502	Mask ROM	Hx20	14E
Y201800503	Mask ROM	Hx20	13E
Y201800504	Mask ROM	Hx20	12E
Y201800805	Slav CPU	Hx20	6D
Y202000001	Hölje undre (Exp. enhet)	Hx20	Exp
Y202000601	Hölje övre (Exp. enhet)	Hx20	Exp
Y202010001	Hölje övre (Bsp)	Hx20	Bsp
Y202010301	Front panel (Bsp)	Hx20	Bsp
Y202010601	Eject knapp (Bsp)	Hx20	Bsp
Y202010901	Hölje undre (Bsp)	Hx20	Bsp
Y202011201	Kassetlock (Bsp)	Hx20	Bsp
Y202011501	Kassetfönster (Bsp)	Hx20	Bsp
Y202202000	Kretskort Mikrokasset	Hx20	-
Y202204000	Kretskort exp.låda	Hx20	Exp
Y202501000	Mikrokasset enhet	Hx20	-
Y202501920	Motor kpl (Bsp)	Hx20	Bsp
Y202501923	Drivrem motor (Bsp)	Hx20	Bsp

LUXOR
Datorer

Art nr: 66 77020-50